MODEL: 91617BS

# ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

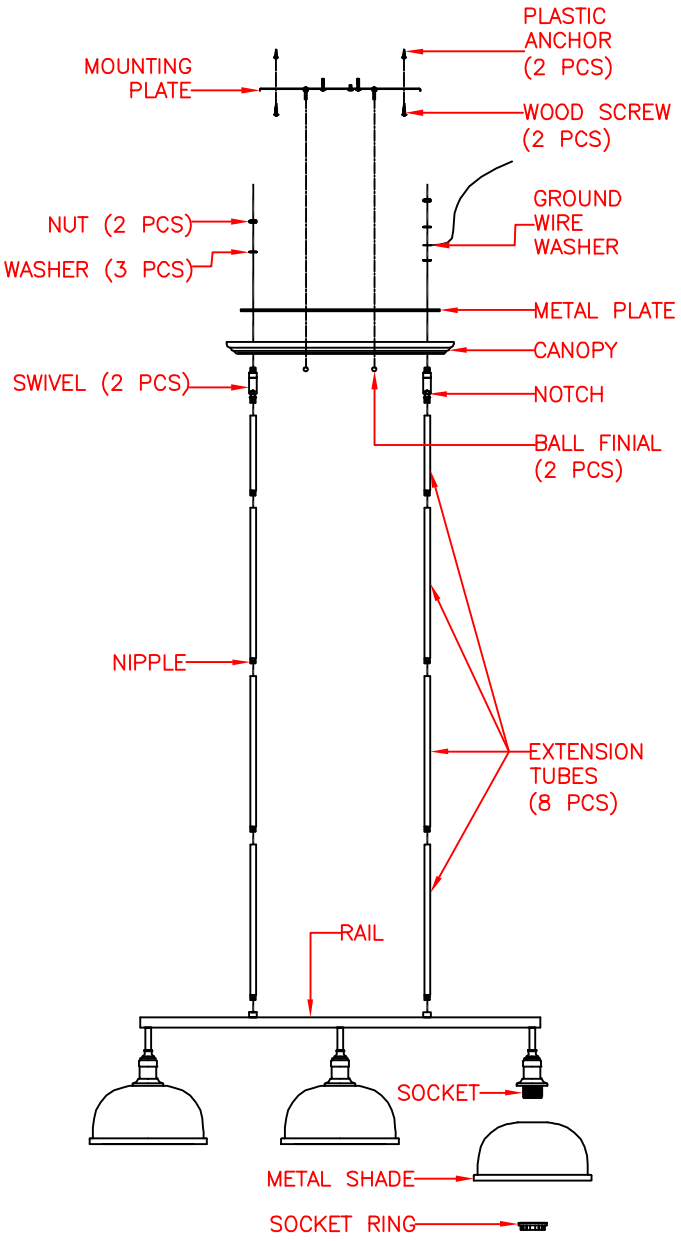


READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FIXTURE SHOULD TAKE APPROXIMATELY 20 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: LADDER, SCREWDRIVER, ADJUSTABLE WRENCH, WIRE CUTTERS.

## UNPACK THE FIXTURE

YOU SHOULD HAVE RECEIVED THE FOLLOWING: CANOPY, METAL PLATE, (2) SWIVELS, (3) WASHERS, GROUND WIRE WASHER, (2) NUTS, (6) 12" AND (2) 6" EXTENSION TUBES, FIXTURE BODY, (3) METAL SHADES AND (3) SOCKET RINGS. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

MOUNTING HARDWARE PACKAGE:
MOUNTING PLATE, (2) 8–32 x 1–1/4" SCREWS, (2) 8–32 x 1" SCREWS, GREEN GROUND SCREW, (3) WIRE CONNECTORS, (2) PLASTIC ANCHORS, (2) WOOD SCREWS AND (2) BALL FINIALS.

## FIXTURE ASSEMBLY

1. FEED WIRES UP THROUGH EXTENSION TUBES AND WORKING UPWARDS TOWARDS CANOPY.

2. SCREW EXTENSION TUBES TO TOP OF RAIL. (USE ANY SINGLE LENGTH OF EXTENSION TUBE OR CONNECT TUBE SECTIONS TOGETHER TO OBTAIN DESIRED LENGTH, REMOVE THE NIPPLE ON EXTENSION TUBE IF NEEDED.)

3. SCREW (2) SWIVELS TO EXTENSION TUBES, MAKE SURE THE NOTCHES OF SWIVELS FACE FRONT.

4. INSERT THE NIPPLES OF SWIVELS INTO HOLES IN CANOPY, THEN PLACE METAL PLATE, (3) WASHERS OVER THE NIPPLES ON TOP OF SWIVELS AND SECURE WITH (2) NUTS AS SHOWN, MAKING SURE THE GROUND WIRE WASHER IS INSTALLED.

**STOP** COMPLETE INSTALLATION INSTRUCTIONS ON NEXT PAGE BEFORE PROCEEDING.

## FINAL ASSEMBLY

1. RAISE A METAL SHADE OVER EACH SOCKET AND SECURE WITH A SOCKET RING.

2. INSTALL A 100 WATT MAX. MEDIUM BASE TYPE "A" BULB (NOT INCLUDED) INTO EACH SOCKET.

3. RESTORE POWER. YOUR FIXTURE IS NOW READY FOR USE.

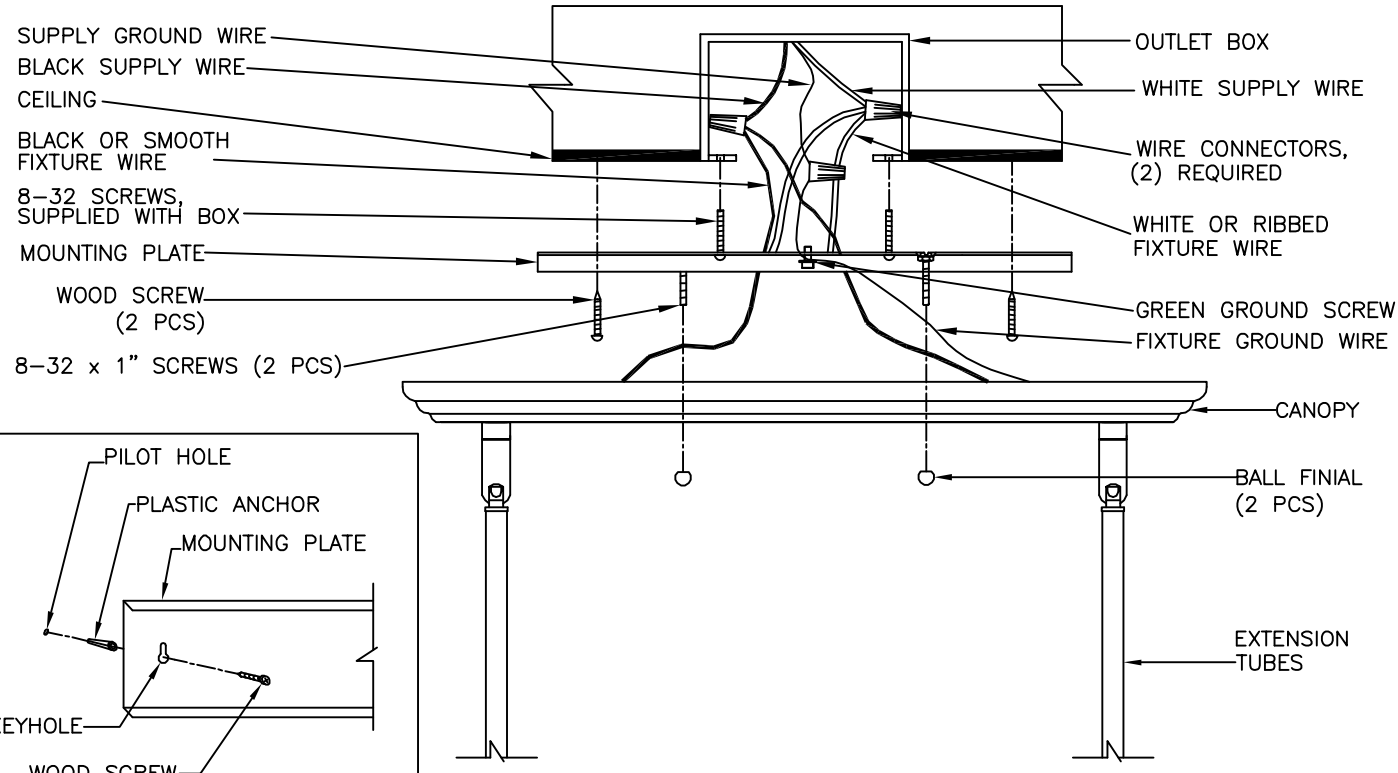


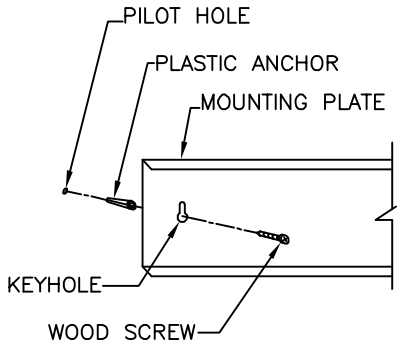


ANCHOR SUPPORT DIAGRAM

# INSTALLATION INSTRUCTIONS

## READ AND SAVE THESE INSTRUCTIONS

**CAUTION:** TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRSTLY, TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.

** IF YOU DO NOT HAVE ELECTRICAL WIRING EXPERIENCE, HAVE YOUR FIXTURE INSTALLED BY A QUALIFIED LICENSED ELECTRICIAN.

***THIS FIXTURE IS TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE WEIGHT OF THIS FIXTURE. THE OUTLET BOX MUST BE DIRECTLY SUPPORTED BY THE BUILDING STRUCTURE.

**COMPLETE FIXTURE ASSEMBLY INSTRUCTIONS FIRST (SEE PREVIOUS PAGE).**

1. LIFT MOUNTING PLATE TO OUTLET BOX SO THAT THE SCREW HOLES IN OUTLET BOX LINE UP WITH SLOTS ON MOUNTING PLATE. MARK SPOTS AT OUTER KEYHOLES FOR THE PLASTIC ANCHORS TO BE INSTALLED.

2. DRILL PILOT HOLES ON SPOTS MARKED AND INSERT PLASTIC ANCHORS.

3. SCREW (2) 8–32 x 1" SCREWS INTO MOUNTING PLATE SO THAT THEY LINE UP WITH HOLES IN CANOPY, ATTACH THE MOUNTING PLATE TO THE CEILING OUTLET BOX USING THE TWO SCREWS PROVIDED WITH THE OUTLET BOX. (NOTE: IF THE SCREWS WITH THE OUTLET BOX ARE TOO SHORT, USE THE (2) 8–32 x 1–1/4" SCREWS PROVIDED IN THE MOUNTING HARDWARE PACKAGE).

4. ATTACH ENDS OF MOUNTING PLATE TO PLASTIC ANCHORS AND SECURE WITH (2) WOOD SCREWS PROVIDED.

5. CONNECT THE WHITE OR RIBBED FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE TWIST–ON WIRE CONNECTORS PROVIDED. CONNECT THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. INSTALL THE FIXTURE GROUND WIRE UNDER THE GREEN GROUND SCREW ON THE CROSSBAR THEN CONNECT THE FIXTURE GROUND WIRE TO THE SUPPLY GROUND WIRE IN THE OUTLET BOX USING THE TWIST–ON WIRE CONNECTOR PROVIDED.

6. TUCK THE WIRES CAREFULLY INSIDE THE OUTLET BOX. SPREAD THE ELECTRICAL SPLICES SO THAT THE BLACK WIRES ARE ON ONE SIDE OF THE OUTLET BOX AND THE WHITE WIRES ARE ON THE OTHER SIDE.

7. RAISE THE FIXTURE TO THE CEILING AND SECURE IN PLACE WITH (2) BALL FINIALS.

8. SEE PREVIOUS PAGE FOR FINAL ASSEMBLY.